

# SHARP

## MINI COMPONENT SYSTEM

MODEL  
**CD-E250E**

OPERATION MANUAL

If you require any advice or assistance regarding your Sharp product, please visit our web-site [www.sharp.co.uk/customersupport](http://www.sharp.co.uk/customersupport). Customers without Internet access may telephone 08705 274277 during office hours (or (01) 676 0648 if telephoning from Ireland).


COMPACT  
**disc**  
DIGITAL AUDIO

CDE250EE\_FRONT.pm

1

Thank you for purchasing this SHARP product.  
To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

CD-E250E Mini Component System consisting of CD-E250E (main unit), CP-E250E (front speakers) and GBOXS5001SJB1 (surround speakers).

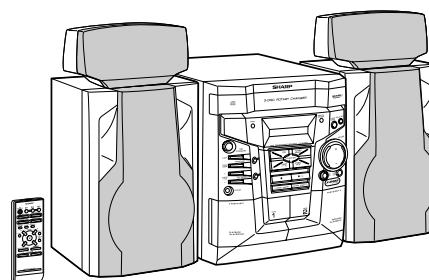


CD-R/RW  
Playable

3-DISC  
CD CHANGER  
with Play Exchange

## Accessories


 
Please confirm that the following accessories are included.

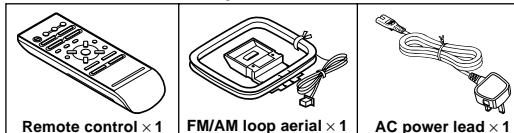

**Note:**  
Only the above accessories are included.

03.2.17, 3:34 PM

## NOTES FOR USERS IN THE U.K. AND IRELAND

The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 3A fuse. Should the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked  or  and of the same rating as above, which is also indicated on the pin face of the plug must be used.

Always refit the fuse cover after replacing the fuse. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut-off the mains plug and fit an appropriate type.

**DANGER:**

The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner.

Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

**IMPORTANT:**

The wires in the mains lead are coloured in accordance with the following code:

Blue : Neutral  
Brown : Live

As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black.
- The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red.

Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three pin plug.

Before replacing the plug cover, make sure that:

- If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug.
- The cord grip is clamped over the sheath of the mains lead and not simply over the lead wires.

IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

**SERVICE INFORMATION**

In the unlikely event of your equipment requiring repair, please contact the dealer or supplier from whom it was purchased. Where this is not possible, please visit our web-site [www.sharp.co.uk/customersupport](http://www.sharp.co.uk/customersupport).

Customers without internet access may telephone 08705 274277 during office hours (or (01) 676 0648 if telephoning from Ireland).

Please note; all calls will be charged at local rate.

Certain replacement parts and accessories may be obtained from our main parts distributor.

WILLOW VALE ELECTRONICS LTD.  
0121 766 5414


In the unlikely event of this equipment requiring repair during the guarantee period, you will need to provide proof of the date of purchase to the repairing company.

Please keep your invoice or receipt, which is supplied at the time of purchase.

- **WARNINGS**
- When the ON/STAND-BY button is set at STAND-BY position, mains voltage is still present inside the unit. When the ON/STAND-BY button is set at STAND-BY position, the unit may be brought into operation by the timer mode or remote control.
- This unit contains no user serviceable parts. Never remove covers unless qualified to do so. This unit contains dangerous voltages, always remove mains plug from the socket before any service operation and when not in use for a long period.
- To prevent fire or shock hazard, do not expose this appliance to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the apparatus.

- This product is classified as a CLASS 1 LASER product.
- Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser Diode Properties  
Material: GaAlAs  
Wavelength: 780 nm  
Emission Duration: continuous  
Laser Output: max. 0.6 mW

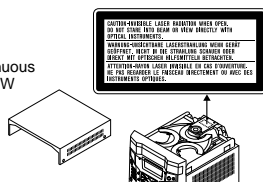

- Recording and playback of any material may require consent, which SHARP is unable to give. Please refer particularly to the provisions of the Copyright Act 1956, the Dramatic and Musical Performers Protection Act 1958, the Performers Protection Acts 1963 and 1972 and to any subsequent statutory enactments and orders.
- This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

### ■ General Information

Precautions .....	4
Controls and indicators .....	5 - 8

Remote control .....	9
System connections .....	10 - 12

Sound control .....	13
Setting the clock .....	14

Listening to a CD (CDs) .....	15, 16
Advanced CD playback .....	17, 18

**Listening to the radio** ..... 19, 20

## Listening to a cassette tape (TAPE 1 or TAPE 2) ..... 21

**Recording to a cassette tape** ..... 22, 23

**Timer and sleep operation** .....24 - 26

 
Troubleshooting chart .....	28, 29
Maintenance .....	30
Specifications .....	30, 31

**TERMS OF GUARANTEE** ..... Back cover


## Precautions

### ■ General


- Please ensure that the equipment is positioned in a well ventilated area and ensure that there is at least 10 cm (4") of free space along the sides, top and back of the equipment.



 - Use the unit on a firm, level surface free from vibration.




- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 60°C (140°F) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power lead from the wall socket. Plug the AC power lead back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.

 

- Hold the AC power plug by the head when removing it from the wall socket, as pulling the lead can damage internal wires.



 - Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.



- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.



- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus is designed for use in moderate climate.
- This unit should only be used within the range of 5°C - 35°C (41°F - 95°F).

### Warning:


The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.

### ■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location, and various other factors. It is advisable to avoid exposure to high volume levels. Do not turn the volume on to full at switch on and listen to music at moderate levels.


Controls and indicators

CD-E250E

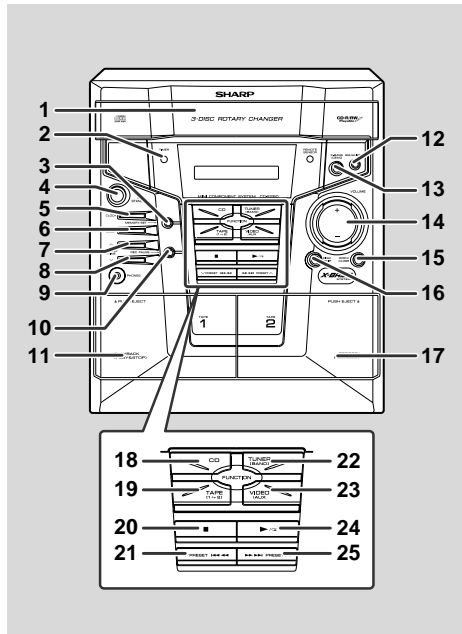

■ Front panel	
	Reference page
1. Disc Tray	15
2. Timer Set Indicator	25
3. Memory/Set Button	14, 18, 20
4. On/Stand-by Button	12
5. Clock Button	14, 24
6. Timer/Sleep Button	24, 26
7. Tuning and Time Up Button	14, 19
8. Tuning and Time Down Button	14, 19
9. Headphone Socket	27
10. Tape 2 Record Pause Button	22, 23
11. Tape 1 Cassette Compartment	21
12. Equaliser Mode Select Button	13
13. Extra Bass/Demo Mode Button	12, 13
14. Volume Up and Down Buttons	13
15. Disc Tray Open/Close Button	15
16. Disc Skip Button	15
17. Tape 2 Cassette Compartment	21
18. CD Button	15
19. Tape (1 - 2) Button	21
20. CD or Tape Stop Button	16, 21
21. CD Track Down or Fast Reverse, Tape 2 Rewind, Tuner Preset Down Button	16, 20, 21
22. Tuner (Band) Button	19
23. Video/Auxiliary Button	27
24. CD Play or Repeat, Tape Play Button	15, 17, 21
25. CD Track Up or Fast Forward, Tape 2 Fast Forward, Tuner Preset Up Button	16, 20, 21

## Controls and indicators (continued)

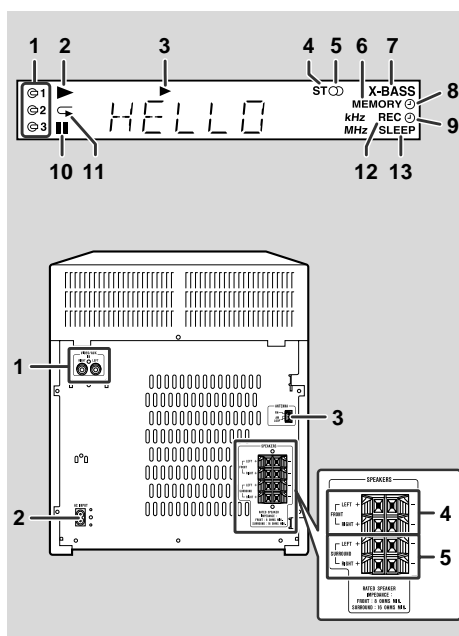


## ■ Display

1. Disc Number Indicators
2. CD Play Indicator
3. Tape Play Indicator
4. FM Stereo Mode Indicator
5. FM Stereo Receiving Indicator
6. Memory Indicator
7. Extra Bass Indicator
8. Timer Recording Indicator
9. Timer Play Indicator
10. CD Pause Indicator
11. CD Repeat Play Indicator
12. Tape 2 Record Indicator
13. Sleep Indicator

## ■ Rear panel

- |   | Reference page |
|---|----------------|
| 1. Video/Auxiliary (Audio Signal) Input Sockets | 27             |
| 2. AC Power Input Socket                        | 10, 12         |
| 3. FM/AM Loop Aerial Socket                     | 10             |
| 4. Front Speaker Terminals                      | 10, 11         |
| 5. Surround Speaker Terminals                   | 10, 11         |

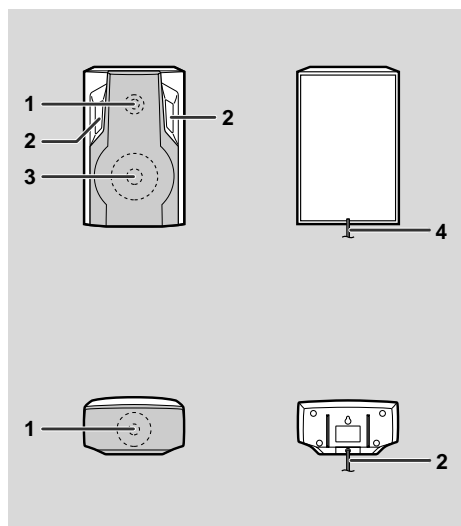

#### ■ Front speaker

1. Tweeter
2. Bass Reflex Ducts
3. Woofer
4. Speaker Wire


#### ■ Surround speaker

1. Full-Range Speaker
2. Speaker Wire

#### Note:

The speaker grilles on the front and surround speakers are not removable.

## Controls and indicators (continued)

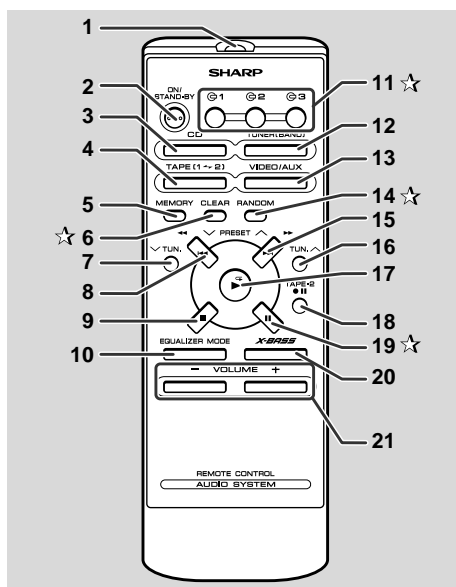

Buttons with "☆" mark in the illustration or highlighted in bold on the right can be operated on the remote control only.

## ■ Remote control

	Reference page
1. Remote Control Transmitter	9
2. On/Stand-by Button	9
3. CD Button	15
4. Tape (1 ~ 2) Button	21
5. Memory Button	18
6. <b>Programme Clear Button</b>	<b>18</b>
7. Tuning and Time Down Button	14, 19
8. CD Track Down or Fast Reverse, Tape 2 Rewind, Tuner Preset Down Button	16, 20, 21
9. CD or Tape Stop Button	16, 21
10. Equaliser Mode Select Button	13
11. <b>Disc Number Select Buttons</b>	<b>15, 18, 22</b>
12. Tuner (Band) Button	19
13. Video/Auxiliary Button	27
14. <b>CD Random Button</b>	<b>17</b>
15. CD Track Up or Fast Forward, Tape 2 Fast Forward, Tuner Preset Up Button	16, 20, 21
16. Tuning and Time Up Button	14, 19
17. CD Play or Repeat, Tape Play Button	15, 17, 21
18. Tape 2 Record Pause Button	22, 23
19. <b>CD Pause Button</b>	<b>16</b>
20. Extra Bass Button	13
21. Volume Up and Down Buttons	13




## Remote control

CD-E250E

### ■ Battery installation

Use 2 "AA" size batteries (UM/SUM-3, R6, HP-7 or similar).  
Batteries are not included.

- 1 **Remove the battery cover.**
- 2 **Insert the batteries according to the direction indicated in the battery compartment.**  
When inserting or removing the batteries, push them towards the battery terminals.
- 3 **Replace the cover.**

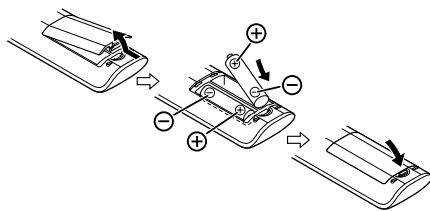

### ■ Precautions for battery use:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit is not to be used for long periods of time. This will prevent potential damage due to battery leakage.

### ■ Caution:

- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.

### ■ Notes concerning use:


- Replace the batteries if the operating distance is reduced or if the operation becomes erratic.
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

### ■ Test of the remote control

Check the remote control after checking all the connections (see pages 10 - 12).

Point the remote control directly at the remote sensor on the unit.


**The remote control can be used within the range shown below:**  
Press the ON/STAND-BY button. Does the power turn on? Now, you can enjoy music.

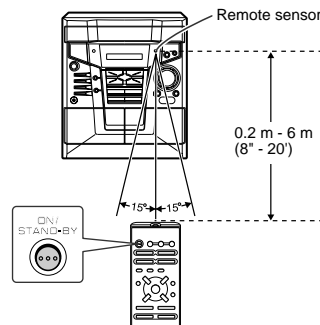

Preparation for Use

## System connections

Preparation for Use

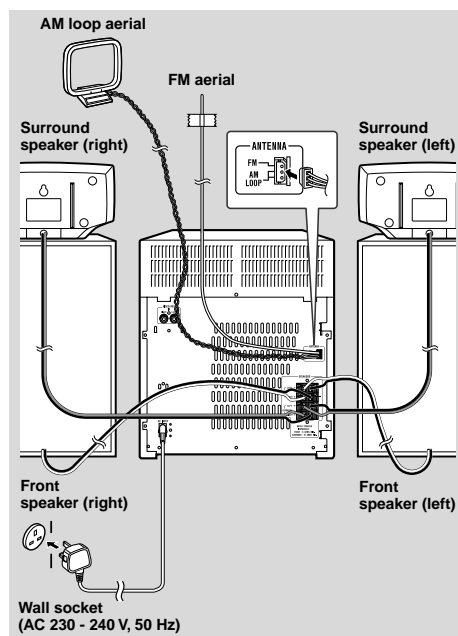

### ■ FM/AM loop aerial connection

Connect the FM/AM loop aerial to the ANTENNA socket.

 
Position the FM aerial wire and rotate the AM loop aerial for optimum reception. Place the AM loop aerial on a shelf, or attach it to a stand or a wall.

#### Notes:

- Placing the aerial on the stereo system or near the AC power lead may cause noise pickup. Place the aerial away from the stereo system for better reception.
- Do not connect the attached FM aerial to an external aerial as this may cause trouble.

#### Installing the AM loop aerial:

< Assembling >



< Attaching to the wall >




## ■ Speaker connection

### Front speakers

Connect the black wire to the FRONT (-) terminal, and the red wire to the FRONT (+) terminal.


### Surround speakers

Connect the black wire to the SURROUND (-) terminal, and the grey wire to the SURROUND (+) terminal.

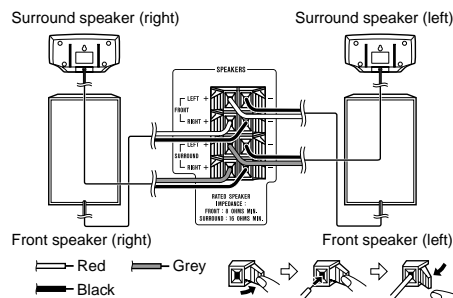


### Caution:

 - If you use other speakers with impedance lower than that specified, the unit may be damaged. Front speakers: 8 ohms Surround speakers: 16 ohms
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.
- **Do not let the bare speaker wires touch each other.**
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.



## ■ Placing the speaker system


To enjoy the surround effect, we recommend that you place each speaker as shown to the below.

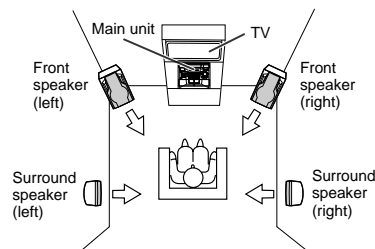

### Installation of the surround speakers:

To enjoy the perfect surround effect, mount the surround speakers on the wall. Install them 60 cm - 90 cm (23" - 35") above the height of your ears when you are seated.

 Example:  
when installed on the wall




Example:  
when installed vertically




## System connections (continued)
 
## ■ To mount the surround speakers on the wall


The design of the surround speakers allows them to be hung on the wall. Be sure to use the type and size of screw that is shown to the right.




## 1 Make a hole in the wall using a drill.

 


## 2 Drive a wall mount plug into the hole using a hammer. Drive the wall mount plug in until it is flush with the wall surface.

 

## 3 Drive one screw into the wall mount plug for each speaker. Drive the screws, so there is about a 5 mm (3/16") space between the wall and the head of the screw.

 

## 4 Mount the surround speaker on the wall so that the screw head is inserted into the slot on the surround speaker.

 **Caution:**

The speaker may fall if mounted improperly. Check the stability of the wall thoroughly. Sharp is not liable for accidents caused by poor wall stability or improper mounting.

## ■ Connecting the AC power lead

After checking all the connections have been made correctly, connect the AC power lead to the AC power input socket, then plug the AC power lead of this unit into the wall socket. If you plug in the unit first, the unit will enter the demonstration mode.

**Notes:**

- Unplug the AC power lead from the wall socket if the unit will not be in use for a prolonged period of time.
- Never use a power lead other than the one supplied. Otherwise, a malfunction or an accident may occur.

## ■ Demonstration mode

The first time the unit is plugged in, the unit will enter the demonstration mode. You will see words scroll.

HELLO

**To cancel the demonstration mode:**

 
When the unit is in the power stand-by mode (demonstration mode), press the X-BASS/DEMO button. The demonstration mode will be cancelled and the display will disappear.

**To return to the demonstration mode:**

When the unit is in the power stand-by mode, press the X-BASS/DEMO button again.

**Note:**

When the power is on, the X-BASS/DEMO button can be used to select the extra bass mode.



## ■ To turn the power on


Press the ON/STAND-BY button to turn the power on.

**After use:**

Press the ON/STAND-BY button to enter the power stand-by mode.


## Sound control

CD-E250E

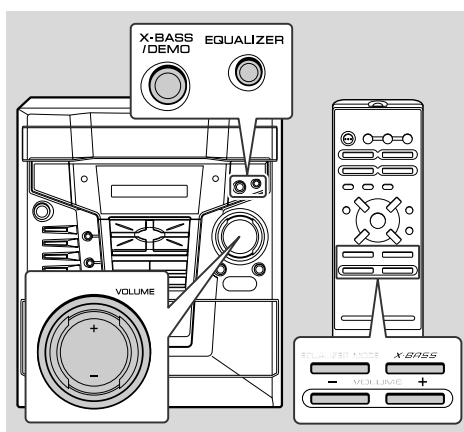


### ■ Volume control

 Press the VOLUME (+ or -) button to increase or decrease the volume.



### ■ Bass control

 When the power is first turned on, the unit will enter the extra bass mode which emphasises the bass frequencies, and "X-BASS" will appear. To cancel the extra bass mode, press the X-BASS/DEMO (X-BASS) button.




### ■ Equaliser

When the EQUALIZER (EQUALIZER MODE) button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQUALIZER (EQUALIZER MODE) button repeatedly until the desired sound mode appears.

→ FLAT	The sound is not modified.
↓ ROCK	Bass and treble are emphasised.
↓ CLASSIC	Treble is cut a little.
↓ POPS	Bass and treble are slightly emphasised.
↓ VOCAL	Vocals (midrange tones) are emphasised.
↓ JAZZ	Treble is slightly emphasised.

## Setting the clock

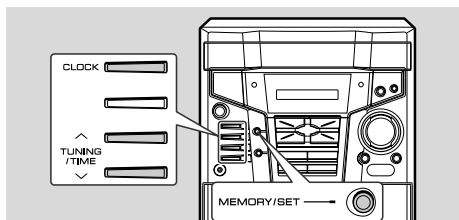

In this example, the clock is set for the 24-hour (0:00) display.

- 1 Press the CLOCK button and within 8 seconds, press the MEMORY/SET button.**



- 2 Within 30 seconds, press the TUNING/TIME (✓ or ^) button to select 24-hour or 12-hour display and then press the MEMORY/SET button.**



"0:00" → The 24-hour display will appear.


(0:00 - 23:59)

"AM 12:00" → The 12-hour display will appear.

(AM 12:00 - PM 11:59)


Note that this can only be set when the unit is first installed or it has been reset. [Refer to "Clearing all the memory (reset)" on page 29 for details.]

 - 3 Within 30 seconds, press the TUNING/TIME (✓ or ^) button to adjust the hour and then press the MEMORY/SET button.**



- Press the TUNING/TIME (✓ or ^) button once to advance the time by 1 hour. Hold it down to advance continuously.
- When the 12-hour display is selected, "AM" will change automatically to "PM".

 - 4 Within 30 seconds, press the TUNING/TIME (✓ or ^) button to adjust the minutes and then press the MEMORY/SET button.**



- Press the TUNING/TIME (✓ or ^) button once to advance the time by 1 minute. Hold it down to advance continuously.
- The hour will not advance even if minutes advance from "59" to "00".

### To confirm the time display:

Press the CLOCK button.

The time display will appear for about 8 seconds.



### Note:

The "CLOCK" or time will flash at the push of the CLOCK button when the AC power supply is restored after a power failure or unplugging the unit. Readjust the clock as follows.

### To readjust the clock:


Perform "Setting the clock" from step 1. If the "CLOCK" is not flashing in step 1, step 2 (for selecting the 24-hour or 12-hour display) will be skipped.

### To change the 24-hour or 12-hour display:

- 1 Clear all the programmed contents. [Refer to "Clearing all the memory (reset)" on page 29 for details.]
- 2 Perform "Setting the clock" from step 1.

## Listening to a CD (CDs)

This system can also play audio CD-R and CD-RW discs, but cannot record.  
Some audio CD-R and CD-RW discs may not be playable due to the state of disc or the device that was used for recording.

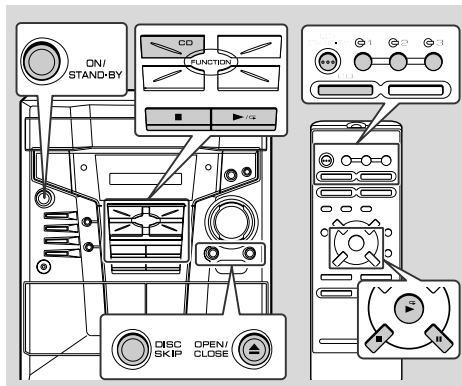


- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the CD button.
- 3 Press the OPEN/CLOSE button to open the disc tray.


### 4 Place the CD(s) on the disc tray, label side up.

 When loading a third disc, press the DISC SKIP button to turn the disc tray, then place the CD in the open position.

- CDs can be placed on any open position on the disc tray.
- Be sure to place 8 cm (3") CDs in the middle of the disc positions.



### 5 Press the OPEN/CLOSE button to close the disc tray.

 

Total number of tracks on the CD whose number is flashing

Total playing time of the CD whose number is flashing

### 6 To select the CD you want to listen to first, press one of the 1 - 3 buttons on the remote control.

### 7 Press the play/pause button to start playback.

- Playback will begin from track 1 on the disc you have selected to play. After that disc finishes playing, the next disc will automatically start playback.
- When the last track on the third disc has finished playing, the CD player will automatically stop.
- When there is no CD in one of the disc 1 - 3 positions, that position will be skipped and the next CD will begin to play.

CD-E250E

## Listening to a CD (CDs) (continued)

### To interrupt playback:

Press the **II** button on the remote control.  
To resume playback from the same point, press the **▶** **⏮** button.

### To stop playback:

Press the **■** button.

### To remove the CDs:

Whilst in the stop mode, press the OPEN/CLOSE **▲** button.  
The disc tray will open. Remove the two discs. Then, press the DISC SKIP button to rotate the disc tray and remove the remaining disc.

### Caution:

- Do not place two CDs in one disc tray.
- Do not play discs with special shapes (heart- or octagon-shaped). It may cause malfunctions.
- Do not push the disc tray whilst it is moving.
- Do not turn the disc tray by hand. This may cause malfunctions.
- If the power fails whilst the tray is open, wait until the power is restored.
- If the disc tray is stopped with force, the unit will not function. If this occurs, press the ON/STAND-BY button to enter the power stand-by mode and then turn the power on again.
- If TV or radio interference occurs during CD operation, move the unit away from the TV or radio.
- If a disc is damaged, dirty, or loaded upside down, the disc will skip or not play back.

### ■ To locate the beginning of a track

#### To move to the beginning of the next track:

Press the **▶▶▶▶** button for less than 0.5 seconds during playback.

#### To restart the track being played:

Press the **◀◀◀◀** button for less than 0.5 seconds during playback.

### Notes:

- You can locate the beginning of a track on one disc only.
- You can skip to any track by pressing the **◀◀◀◀** or **▶▶▶▶** button repeatedly until the desired track number appears.

### ■ To locate the desired portion

#### For audible fast forward:

Press and hold down the **▶▶▶▶** button during playback.

#### For audible fast reverse:

Press and hold down the **◀◀◀◀** button during playback.

### Notes:

- Normal playback will resume when the **◀◀◀◀** or **▶▶▶▶** button is released.
- You can locate the desired portion on one disc only.
- When the end of the last track is reached during fast forward, "END" will appear on the display and CD operation will be paused. When the beginning of the first track is reached during fast reverse, the unit will enter the playback mode.



## Advanced CD playback

 
CD-E250E

### ■ Starting playback with a desired track

You can play a disc starting with the desired track.

- 1 Whilst in the stop mode, press one of the 1 - 3 buttons on the remote control or DISC SKIP button to select the desired disc.
- 2 Press the ◀◀ or ▶▶ button to select the desired track.

Selected disc number



Selected track number

- 3 Press the ▶ / ◀ button to start playback.

Playback of the selected track is started. When the end of the last track is reached, the next disc will automatically be started.


#### Notes:

 - When the DISC SKIP button is pressed during playback, the next disc will begin automatically.
- When one of the 1 - 3 buttons on the remote control is pressed during playback, the selected disc will begin automatically.
- It is possible to enter a track number which is larger than the total track number of the disc (maximum 99). In this case, the last track on the disc will be played back.

### ■ Random play

The tracks on the disc(s) can be played in random order automatically.

Press the RANDOM button on the remote control to begin random play.



#### To cancel random play:

Press the ■ button.

#### Notes:

 
- The random play will stop automatically when all tracks are played once. (The same track will not be played back twice.)
- If you press the ▶▶▶ button during random play, you can move to the track selected next by the random operation. On the other hand, the ◀◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.
- In random play, the CD player will select and play tracks automatically. (You cannot select the order of the tracks.)

### ■ Repeat play

All tracks on up to 3 discs, or a programmed sequence can be continuously repeated.

#### To repeat all tracks on up to 3 discs:

Press the ▶ / ◀ button twice.



#### To repeat a desired track:

Perform steps 1 - 4 in the "Programmed play" section on page 18 and then press the ▶ / ◀ button twice.

#### To repeat random play:

Press the ▶ / ◀ button during random play.

#### To cancel repeat play:

Press the ▶ / ◀ button again. "◀" will go out.

#### Caution:

After performing repeat play, be sure to press the ■ button. Otherwise, the disc(s) will play continuously.

## Advanced CD playback (continued)

### ■ Programmed play

You can choose up to 32 selections for playback in the order you like.

- 1 Whilst in the stop mode, press one of the - buttons on the remote control to select the desired disc.
 

Selected disc number
- 2 Press the or button to select the desired track.
 

Selected track number
- 3 Press the MEMORY/SET (MEMORY) button to save the track number.
 

Playback order

When the track is memorised, "MEMORY" will appear.
- 4 Repeat steps 1 - 3 for other tracks. Up to 32 tracks can be programmed.  
If you make a mistake, the programmed tracks can be cleared by pressing the CLEAR button.
- 5 Press the button to start playback.

### To clear the programmed selections:

Whilst the "MEMORY" indicator is lit, set the CD to the stop mode and then press the CLEAR button.

Each time the button is pressed, one track will be cleared, beginning with the last track programmed. When all the tracks are cleared, "MEMORY" will disappear.



### Adding tracks to the programme:

If a programme has been previously stored, the "MEMORY" indicator will be displayed. Then follow steps 1 - 3 to add tracks. The new tracks will be stored after the last track of the original programme.

#### Notes:

- Opening the disc tray automatically cancels the programmed sequence.
- Even if you press the ON/STAND-BY button to enter the stand-by mode or change the function from CD to another, the programmed selections will not be cleared.
- During programme operation, random play is not possible.

### ■ Care of compact discs


Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the centre, along the radius.



## Listening to the radio

CD-E250E

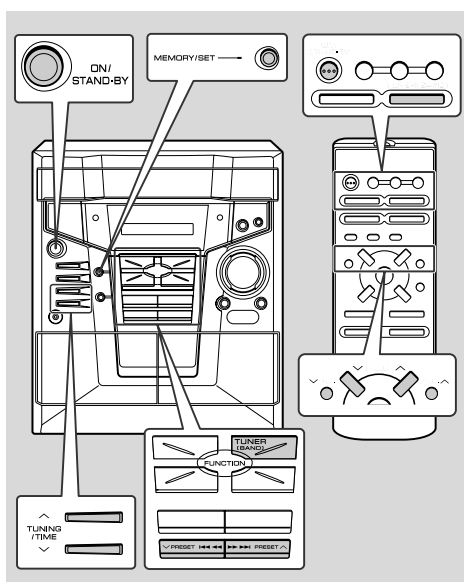

### ■ Tuning

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TUNER (BAND) button repeatedly to select the desired frequency band (FM or AM).
- 3 Press the TUNING/TIME (✓ or ^) button to tune in to the desired station.

#### Manual tuning:

Press the TUNING/TIME button as many times as required to tune in to the desired station.

#### Auto tuning:

When the TUNING/TIME button is pressed for more than 0.5 seconds, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

#### Notes:

 
- This can be operated by pressing the TUN. (✓ or ^) button on the remote control.
- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING/TIME button again.

#### To receive an FM stereo transmission:

Press the TUNER (BAND) button to display the "ST" indicator.

- "CD" will appear when an FM broadcast is in stereo.

FM stereo mode indicator



FM stereo receiving indicator

- If the FM reception is weak, press the TUNER (BAND) button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clearer.


## Listening to the radio (continued)
 
### ■ Memorising a station

You can store 40 AM and FM stations in memory and recall them at the push of a button. (Preset tuning)

**1 Perform steps 1 - 3 in "Tuning" on page 19.**


**2 Press the MEMORY/SET button to enter the preset tuning saving mode.**



**3 Within 30 seconds, press the PRESET (✓ or ^) button to select the preset channel number.**

Store the stations in memory, in order, starting with preset channel 1.

 **4 Within 30 seconds, press the MEMORY/SET button to store that station in memory.**



If the "MEMORY" and preset number indicators go out before the station is memorised, repeat the operation from step 2.

**5 Repeat steps 1 - 4 to set other stations, or to change a pre-set station.**

When a new station is stored in memory, the station previously memorised will be erased.

#### Note:

The backup function protects the memorised stations for a few hours should there be a power failure or if the AC lead is disconnected.

### ■ To recall a memorised station

Press the PRESET (✓ or ^) button for less than 0.5 seconds to select the desired station.

### ■ To scan the preset stations

The stations saved in memory can be scanned automatically. (Preset memory scan)

- 1 Press and hold down the PRESET (✓ or ^) button. The preset number will flash and the programmed stations will be tuned in sequentially, for 5 seconds each.
- 2 When the desired station is located, release the PRESET (✓ or ^) button.

### ■ To erase entire preset memory

- 1 Press the ON/STAND-BY button to enter the stand-by mode.
- 2 Whilst pressing down the TUNER (BAND) button and the DISC SKIP button, press the ON/STAND-BY button until "TUNER CL" appears.




TUNER CL

## Listening to a cassette tape (TAPE 1 or TAPE 2)

CD-E250E

### Before playback:


- For playback, use normal or low-noise tapes for the best sound. (Metal or CrO<sub>2</sub> tapes are not recommended.)
- Do not use C-120 tapes or poor-quality tapes, as they may cause malfunctions.
- Before loading a tape into the cassette compartment, tighten the slack with a pen or a pencil.

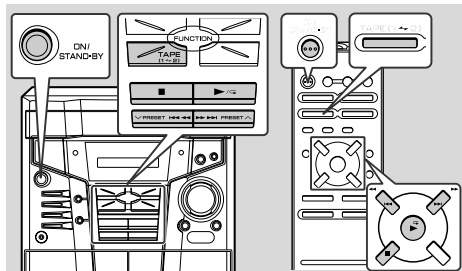

Playback is possible in the TAPE 1 compartment as well as the TAPE 2 compartment.

**1 Press the ON/STAND-BY button to turn the power on.**

 
**2 Open the cassette door by pushing the area marked "PUSH EJECT ▲".**



**3 Load a cassette into the TAPE 1 compartment or TAPE 2 compartment with the side to be played facing toward you.**



 **4 Press the TAPE (1 ~ 2) button to select the cassette you want to listen to.**



**5 Press the ▶/⏸ button to start playback.**

### To stop playback:

Press the ■ button.

### Fast forward/rewind: (TAPE 2 only)

- 1 Press the ■ button, then press the TAPE (1 ~ 2) button to select TAPE 2.
- 2 To advance the tape, press the ►►► button. To rewind it, press the ◀◀◀ button.


### Caution:

- To remove the cassette, press the ■ button, and then open the compartment.
- Before changing from one tape operation to another, press the ■ button.
- If a power failure occurs during tape operation, the tape head will remain engaged with the tape and the cassette door will not open. In this case, wait until the power is restored.
- Even if the || button on the remote control is pressed during tape playback, the unit will not enter the pause mode.

## Recording to a cassette tape


### Before recording:

- When recording important selections, make a preliminary test to ensure that the desired material is properly recorded.
- SHARP is not liable for damage or loss of your recording arising from malfunction of this unit.
- The volume and sound controls can be adjusted with no effect on the recorded signal (Variable Sound Monitor).
- **For recording, use only normal tapes. Do not use metal or CrO<sub>2</sub> tapes.**
- Recording can be operated in the TAPE 2 compartment only. The TAPE 1 compartment is for playback only.

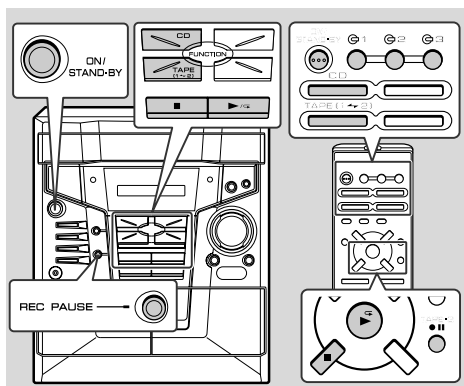

### Erase-prevention tab of cassette tapes:


- When recording on a cassette tape, make sure that the erase-prevention tabs are not removed. Cassettes have removable tabs that prevent accidental recording or erasing.
- To protect the recorded sound, remove the tab after recording. Cover the tab hole with adhesive tape to record on the tape without the tab.

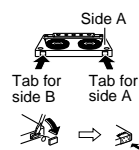

### ■ Recording from a CD (CDs)

You can record 3 CDs continuously.

 - 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Load a cassette into the TAPE 2 cassette compartment with the side to be recorded on facing you.**  
Wind past the leader of the tape, on which recording cannot be performed.
- 3 Press the CD button and load the desired disc.**
- 4 Press one of the 1 - 3 buttons on the remote control to select the disc to be recorded first.**
- 5 Press the REC PAUSE (TAPE-2) button.**  
Recording will be paused.
- 6 Press the ► / ◀ button to start recording.**
  - CD playback will start approximately 5 seconds after the tape starts.
  - Recording is started from the selected CD. When the playback of the last disc is finished or the end of the tape is reached, the CD and the cassette will stop automatically.



**To perform programmed recording:**

- 1 Programme discs and tracks. (See page 18.)
- 2 Press the REC PAUSE (TAPE-2 ●II) button.
- 3 Press the ► / ◀ button.

**To interrupt recording:**

Press the REC PAUSE (TAPE-2 ●II) button.

- Recording is paused, but CD playback will continue.

To resume recording, press the ► / ◀ button.

**To stop recording:**

Press the ■ button.

The CD and tape will stop.

**Note:**

Whilst recording, OPEN/CLOSE ▲ button is deactivated. It is recommended to perform CD recording after closing the disc tray.

**■ Recording from the radio**

- 1 Tune in to the desired station. (See page 19.)
- 2 Load a cassette into the TAPE 2 cassette compartment with the side to be recorded on facing you.  
Wind past the leader of the tape, on which recording cannot be performed.
- 3 Press the REC PAUSE (TAPE-2 ●II) button.  
Recording will be paused.
- 4 Press the ► / ◀ button to start recording.

**To interrupt recording:**

Press the REC PAUSE (TAPE-2 ●II) button.

To resume recording, press the ► / ◀ button.

**To stop recording:**

Press the ■ button.

**Note:**

 
If you hear a whistling noise whilst recording an AM station, move the AM loop aerial.

**■ Dubbing from tape to tape**

You can record from TAPE 1 to TAPE 2.

- 1 Press the ON/STAND-BY button to turn the power on.

- 2 Load a prerecorded cassette into the TAPE 1 cassette compartment. Insert a blank tape into the TAPE 2 cassette compartment.




It is recommended that the recording tape is the same length as the master tape.

- 3 Press the TAPE (1 → 2) button until "TAPE 1" appears on the display.

- 4 Press the REC PAUSE (TAPE-2 ●II) button.

 Recording will be paused.



- 5 Press the ► / ◀ button to start dubbing.

**To stop dubbing:**

Press the ■ button.

TAPE 1 and TAPE 2 will simultaneously stop.

**■ Erasing recorded tapes**

- 1 Load the tape to be erased into the TAPE 2 cassette compartment with the side to be erased facing toward you.
- 2 Press the TAPE (1 → 2) button until "TAPE 2" appears on the display.
- 3 Press the REC PAUSE (TAPE-2 ●II) button.
- 4 Press the ► / ◀ button to start erasing.

**Note:**

Make sure that the TAPE 1 is not in use.

## Timer and sleep operation

### Timer playback:

The unit turns on and plays the desired source (CD, tuner, tape) at the preset time.

### Timer recording:

The unit turns on and starts recording from the tuner at the preset time.

### Sleep operation:

The radio, compact disc and cassette tape can all be turned off automatically.

 
### ■ Timer playback or timer recording

#### Before setting timer:

- 1 Press the CLOCK button to check that the clock is set to the correct time. (Refer to page 14.)
- 2 For timer playback: Load a cassette or discs to be played.  
For timer recording: Load a cassette for recording in the TAPE 2 cassette compartment.



- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the CD, TUNER (BAND) or TAPE (1 → 2) button to select the desired function.  
To select the timer playback source: CD, TUNER (BAND) or TAPE.  
To select the timer recording source: TUNER (BAND).  
When you select the TUNER (BAND), tune into the desired station.
- 3 Adjust the volume using the VOLUME buttons.  
Do not turn the volume up too high.
- 4 Press the TIMER/SLEEP button repeatedly to select timer playback or timer recording and within 8 seconds, press the MEMORY/SET button.  
Display the white "⌚" for timer playback and the red "⌚" for timer recording.





- 5** Within 30 seconds, press the TUNING/TIME (✓ or ^) button to specify the hour to start, then press the MEMORY/SET button.



The illustrations show the timer playback setting.

- 6** Within 30 seconds, press the TUNING/TIME (✓ or ^) button to specify the minute to start, then press the MEMORY/SET button.



- Settings are displayed in order and the unit will enter the timer stand-by mode.
- Timer set indicator will light up.



**To cancel the timer playback/timer recording:**

Press the ON/STAND-BY button to turn the power on.

- 7** When the preset time is reached, playback or recording will start.

The volume will increase gradually until it reaches the volume you were listening to before your system entered the timer stand-by mode.

- 8** The unit will enter the stand-by mode one hour after the timer playback or recording starts.

**To reset or change the timer setting:**

Perform "Timer playback or timer recording" from the beginning.

**Note:**

When performing timer playback or recording using another unit connected to the VIDEO/AUX IN sockets, select "VIDEO/AUX" in step 2.

At this time, only this unit will be turned on or enter the power stand-by mode automatically. It will enter the power stand-by mode 1 hour after the playback or recording starts. However, the other unit will not be turned on or off.

## Timer and sleep operation (continued)

### ■ Sleep operation

#### 1 Play back the desired sound source.

#### 2 Press the TIMER/SLEEP button repeatedly until "SLEEP" is displayed and then within 8 seconds, press the MEMORY/SET button.

SLEEP 3:00 SLEEP 0:50

#### To change the sleep time:

Whilst the sleep time is displayed, press the TUNING/TIME (✓ or ^) button.

(Maximum: 3 hours - Minimum: 5 minutes)

→ 3:00 → 2:00 → 1:30 → 1:00  
(cancel) ← 0:05 ← 0:10 ← 0:15 ← 0:30 ←

#### 3 Within 30 seconds, press the MEMORY/SET button.

#### 4 Your system will enter the power stand-by mode automatically after the preset time has elapsed.

The volume will turn down 30 seconds before the sleep operation finishes.

#### To cancel the sleep operation:

Press the ON/STAND-BY button whilst the sleep timer is set.

#### To confirm the remaining sleep time:

Press the TIMER/SLEEP button whilst the sleep timer is set. The remaining sleep time is displayed for about 8 seconds.


### ■ To use timer and sleep operation together

Example: To fall asleep and wake up to the same radio station

You can play back the same source only (the function cannot be switched).

#### 1 Set the sleep time (see left, steps 1 - 3).

#### 2 Whilst the sleep timer is set, set the desired playback time (steps 4 - 6, pages 24 - 25).

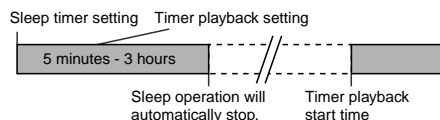


#### Caution:

When using the cassette deck, be sure the tape length is long enough to perform both functions. If you want to sleep and wake up listening to a tape, and the length of the tape is shorter than the sleep timer setting, timer playback will not be possible.

## Enhancing your system

The connection lead is not included. Purchase a commercially available lead as shown below.

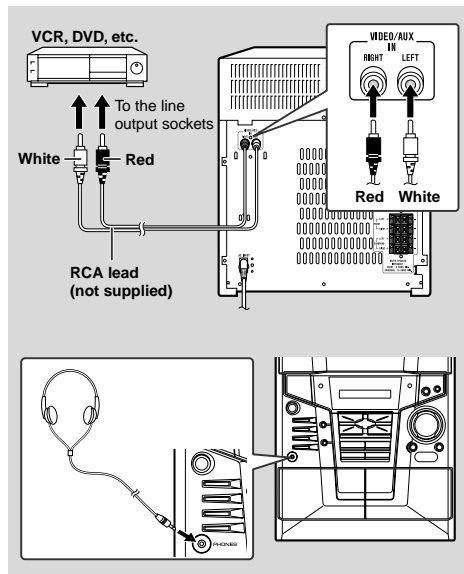

### ■ Listening to the playback sounds from VCR, DVD, etc.

- 1 Use a connection lead to connect the VCR, DVD, etc. to the VIDEO/AUX IN sockets.  
When using video equipment, connect the audio output to this unit and the video output to a television.
- 2 Press the ON/STAND-BY button to turn the power on.
- 3 Press the VIDEO/AUX button.
- 4 Play the connected equipment.

#### Note:

To prevent noise interference, place the unit away from the television.

### ■ To record on a tape

- 1 Insert a cassette in the TAPE 2 cassette compartment.
- 2 Press the VIDEO/AUX button.
- 3 Press the REC PAUSE (TAPE-2 ●II) button.
- 4 Press the ► / ◀ button.
- 5 Play the VCR, DVD, etc.

### ■ Headphones

- Before plugging in or unplugging the headphones, reduce the volume.
- Be sure your headphones have a 3.5 mm (1/8") diameter plug and are between 16 ohms and 50 ohms impedance. The recommended impedance is 32 ohms.
- Plugging in the headphones disconnects the speakers automatically. Adjust the volume using the VOLUME buttons.

CD-E250E

## Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.  
If something is wrong with this product, check the following before calling your authorised SHARP dealer or service centre.

### ■ General

Symptom	Possible cause
● The clock is not set to the correct time.	● Did a power failure occur? Reset the clock. (Refer to page 14.)
● When a button is pressed, the unit does not respond.	● Set the unit to the power stand-by mode and then turn it back on. ● If the unit still malfunctions, reset it. (Refer to page 29.)
● No sound is heard.	● Is the volume level set to "0"? ● Are the headphones connected? ● Are the speaker wires disconnected?

### ■ CD player

Symptom	Possible cause
● Playback does not start.	● Is the disc loaded upside down?
● Playback stops in the middle or is not performed properly.	● Does the disc satisfy the standards? ● Is the disc distorted or scratched?
● Playback sounds are skipped, or stopped in the middle of a track.	● Is the unit located near excessive vibrations? ● Is the disc very dirty? ● Has condensation formed inside the unit?

### ■ Tuner

Symptom	Possible cause
● The radio makes unusual noises continuously.	● Is the unit placed near the TV or computer? ● Is the FM/AM loop aerial placed properly? Move the aerial away from the AC power lead if it's located nearby.

### ■ Cassette deck

Symptom	Possible cause
● Cannot record.	● Is the erase-prevention tab removed?
● Cannot record tracks with proper sound quality.	● Is it a normal tape? (You cannot record on a metal or CrO <sub>2</sub> tape.)
● Cannot erase completely.	
● Sound skipping.	● Is there slack in the tape? ● Is the tape stretched?
● Cannot hear treble.	● Are the capstans, pinch rollers, or heads dirty?
● Sound fluctuation.	
● Cannot remove the tape.	● If a power failure occurs during playback, the heads remain engaged with the tape. Do not open the compartment with great force.

### ■ Remote control

Symptom	Possible cause
<ul style="list-style-type: none"> <li>The remote control does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>Is the AC power lead of the unit plugged in?</li> <li>Is the battery polarity correct?</li> <li>Are the batteries dead?</li> <li>Is the distance or angle incorrect?</li> <li>Does the remote control sensor receive strong light?</li> </ul>

### ■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

#### If such a problem occurs, do the following:

- Set the unit to the stand-by mode and turn the power on again.
- If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

#### Note:

If neither operation above restores the unit, clear all the memory by resetting it.

### ■ Clearing all the memory (reset)

- Press the ON/STAND-BY button to enter the power stand-by mode.
- Whilst pressing down the CLOCK button and the DISC SKIP button, press the ON/STAND-BY button until "CLEAR" appears.



#### Caution:

This operation will erase all data stored in memory including clock, timer settings, tuner preset, and CD programme.

### ■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape heads, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.


### ■ Before transporting the unit

- Press the ON/STAND-BY button to turn the power on.
- Press the CD button.
- Press the OPEN/CLOSE ▲ button to open the disc tray. Remove all CDs inserted in the unit.
- Press the OPEN/CLOSE ▲ button to close the disc tray. Make sure that "NO DISC" is displayed.
- Press the ON/STAND-BY button to enter the stand-by mode, and then unplug the AC power lead from the wall socket.

## Maintenance

### ■ Cleaning the tape-handling parts

- Dirty heads, capstans or pinch rollers can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.
- When cleaning the heads, pinch rollers, etc., unplug the unit which contains high voltages.

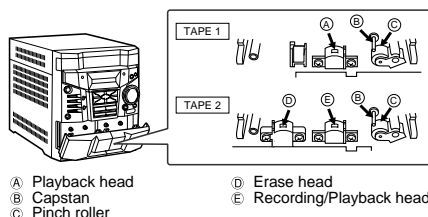

- After long use, the deck's heads and capstans may become magnetised, causing poor sound. Demagnetise these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetiser. Read the demagnetiser's instructions carefully before use.

### ■ Cleaning the CD pickup lens

Poor performance during CD playback (skipping or jumping) can be caused by a dirty or contaminated CD laser pick up lens. If this happens then the use of a commercially available CD lens cleaning discs may restore normal operation. Contact your supplier or local CD software dealer to obtain CD lens cleaning discs. Ensure all included instructions/documentation are carefully followed.

### ■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

#### Caution:

- Do not use chemicals for cleaning (petrol, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

## Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

### ■ General

<b>Power source</b>	AC 230 - 240 V, 50 Hz
<b>Power consumption</b>	78 W
<b>Dimensions</b>	Width: 270 mm (10-5/8") Height: 305 mm (12") Depth: 342 mm (13-1/2")
<b>Weight</b>	6.4 kg (14.1 lbs.)

### ■ Amplifier

<b>Output power</b>	Front speakers: RMS: 46 W (23 W + 23 W) (10 % T.H.D.) RMS: 33 W (16.5 W + 16.5 W) (0.9 % T.H.D.) Surround speakers: RMS: 20 W (10 W + 10 W) (10 % T.H.D.) RMS: 17 W (8.5 W + 8.5 W) (0.9 % T.H.D.)
<b>Output terminals</b>	Front speakers: 8 ohms Surround speakers: 16 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms)
<b>Input terminals</b>	Video/Auxiliary (audio signal): 500 mV/47 k ohms

### ■ CD player

<b>Type</b>	3-disc multi-play compact disc player
<b>Signal readout</b>	Non-contact, 3-beam semiconductor laser pickup
<b>D/A converter</b>	1-bit D/A converter
<b>Frequency response</b>	20 - 20,000 Hz
<b>Dynamic range</b>	90 dB (1 kHz)

### ■ Tuner

<b>Frequency range</b>	FM: 87.5 - 108 MHz AM: 522 - 1,620 kHz
------------------------	---

### ■ Cassette deck

<b>Frequency response</b>	125 - 8,000 Hz (normal tape)
<b>Signal/noise ratio</b>	50 dB (TAPE 1, playback) 50 dB (TAPE 2, recording/playback)
<b>Wow and flutter</b>	0.3 % (WRMS)

### ■ Front speaker

<b>Type</b>	2-way type speaker system 5 cm (2") tweeter 10 cm (4") woofer
<b>Maximum input power</b>	46 W
<b>Rated input power</b>	23 W
<b>Impedance</b>	8 ohms
<b>Dimensions</b>	Width: 200 mm (7-7/8") Height: 305 mm (12") Depth: 175 mm (6-7/8")
<b>Weight</b>	2.8 kg (6.2 lbs.)/each

### ■ Surround speaker

<b>Type</b>	8 cm (3-1/8") full-range speaker
<b>Maximum input power</b>	20 W
<b>Rated input power</b>	10 W
<b>Impedance</b>	16 ohms
<b>Dimensions</b>	Width: 195 mm (7-11/16") Height: 100 mm (4") Depth: 140 mm (5-1/2")
<b>Weight</b>	0.7 kg (1.5 lbs.)/each



#### TERMS OF GUARANTEE

Sharp Electronics (UK) Ltd. ("Sharp") guarantees to provide for the repair, or at its option the replacement, of this product subject to the conditions listed below:-

1. This guarantee shall only apply to faults which are due to inferior workmanship or materials. It does not cover faults or damage caused by accident, misuse, fair wear and tear, neglect, tampering with the product, or repair other than by a Service Facility appointed by Sharp.
2. As this product is intended for private domestic use only, the guarantee will not apply if the product is used in the course of a business, trade or profession.
3. To benefit from this guarantee, any fault which occurs must be notified to Sharp, or its appointed Service Facility within one year from the date this product was purchased. Proof of purchase must be provided.
4. The guarantee does not cover carriage costs, jewelled styli, audio tapes, compact discs or batteries.
5. In the unlikely event of this product requiring repair, please contact the supplier from whom it was purchased. Where this is not possible, please contact the Sharp Customer Information Centre on the telephone number given below.
6. No person has any authority to vary the terms or conditions of this guarantee.
7. This guarantee is offered as an additional benefit to your statutory rights, and does not affect these rights in any way.

If you have any difficulty operating this product, or would like information on other Sharp products, please telephone the Sharp Customer Information Centre on the number given below.

Sharp Customer Information Centre - Telephone 08705 274277  
(or (01) 676 0648 if telephoning from Ireland)

# SHARP

**SHARP ELECTRONICS (U.K.) LTD.**

Sharp House, Thorp Road, Newton Heath, Manchester, M40 5BE

**SHARP CORPORATION**

TINSE0142SJZZ  
03B N HK ①

